Palm™ handheld Bluetooth™ wireless printing

hp deskjet 995c series printer

invent

Palm™ handheld Bluetooth™ wireless printing

table of contents

hewlett-packard company notices i

acknowledgments i

printing requirements 1

printing instructions 1

install a Bluetooth SDI/O expansion card 2

print a document 3

send file 3

(optional) BtPrint™ 4

- installing BtPrint on the Palm handheld device 4
- printing 5

(optional) choose default printer 7

(optional) Documents To Go® 8

- installing 8
- printing 8

notices and acknowledgements

hewlett-packard company notices

The information contained in this document is subject to change without notice.

Hewlett-Packard (HP) makes no warranty of any kind with regard to this material including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Hewlett-Packard shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws.

acknowledgments

Palm OS and HotSync are trademarks of Palm, Inc.

Documents to Go is a trademark of DataViz.

Microsoft, MS, and Windows are registered trademarks of Microsoft Corporation.

Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc. U.S.A. and licensed to Hewlett-Packard.

BtPrint is a trademark of IS/Complete Inc.

Copyright 2002 Hewlett-Packard Company

Palm™ handheld m500 series printing instructions

printing requirements

Before you can print, you will need:

- A Bluetooth™ Secure Digital Input/Output (SDI/O) expansion card and software. Visit Palm's Website at: www.palm.com.
- (Optional) Documents To Go®. Find Documents To Go on the CD that originally came with your Palm™ handheld or visit the DataViz Website at www.dataviz.com.

printing instructions

Follow these steps to print using a Palm handheld m500:

1. install a Bluetooth SDI/O expansion card.
2. print a document.
   - Print unformatted documents in the Date Book, Address, To Do List, and Memo Pad options using send file.
   - Print formatted documents in the Date Book, Address, To Do List, Memo Pad, and Mail options using (optional) BtPrint™.
   - Print MS Word and MS Excel documents using (optional) Documents To Go®.

install a Bluetooth SDI/O expansion card

Warning: You must install the software files before inserting the Bluetooth card in the Palm handheld. Otherwise, the card will not function properly.

Follow these steps to install a Bluetooth SDI/O card:

1. Verify that the Bluetooth SDI/O card software has been installed on your computer.
2. Perform a HotSync® operation.

   A message appears on the Palm handheld after the HotSync operation is complete.
3. Insert the SDI/O card in the expansion slot.

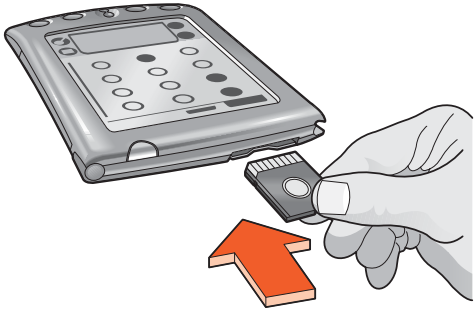

print a document

Print a document using either the send file, BtPrint, or Documents To Go method.

send file

Sending is a Bluetooth wireless communication method that is included as part of Palm OS 4.0. The printed output resulting from the send command is unformatted.

Follow these steps to send an item to print:

1. Tap the **Home** icon until the Main menu appears.
2. Tap one of the following options:
   - Address
   - Memo Pad
   - Date Book
   - To Do List

   The screen for the selected program appears.
3. Select an item to print.
4. Tap the **Menu** icon.
5. Tap **Send**.

   The Palm handheld searches for, then displays, a list of available Bluetooth devices.
6. Tap the checkbox next to the printer's Bluetooth device name, then tap **OK**.
7. If you are prompted to enter a PIN code, enter the printer's PIN code, then tap **OK**.

   The default PIN code is 0.

   The Palm handheld connects to the printer, then the file prints.

(optional) BtPrint™

BtPrint enhances the formatting for documents printed from the Address, Memo Pad, To Do List, Date Book, and Mail options.

installing BtPrint on the Palm handheld device

Verify that the Palm handheld device cradle is attached to your PC and place the Palm handheld in its cradle.

1. Click the **Palm Desktop** icon on your PC.
2. Click **View** > **Install** > **Add**.
3. Browse to the CD or folder where your Palm handheld SDI/O Bluetooth software resides.
4. Double-click the **Printing** folder.
5. Double-click the **HP** folder.
6. Select **BtPrintVxxxxx.prc** where xxxxx is the current version of the program.
7. Click **Open** > **Done**.
8. Perform a HotSync operation to install BtPrint on the Palm handheld.
9. Insert the SDI/O Bluetooth card in your Palm handheld.

printing

1. Tap the **Home** icon until the **All** menu appears.
2. Tap the **BtPrint995c** icon.
   The BtPrint screen appears.

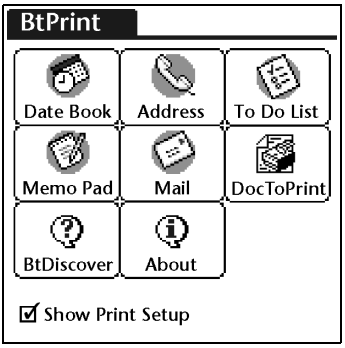

3. Tap one of the following options:
   - Date Book
   - Address
   - To Do List
   - Memo Pad
   - Mail

   The screen for the selected program appears.
4. Select the category or file you want to print.
5. Tap the **Menu** icon.
6. Tap **BtPrint** in the menu. If printing the To Do List, tap **Today**, **Tomorrow**, or **All** to select the records to print.
   The BtPrint Setup screen appears.

   Note: If the BtPrint command does not appear in the menu, BtPrint does not support the selected category or view.

7. Select appropriate options:
   - Copies: number of pages to be printed
   - Paper Size: appropriate paper size
8. Select one of the following print options:
   - If you have selected a default printer, tap **OK,** then proceed to step 10. For more information on selecting a default printer, see (optional) choose default printer on page 7.
   - If you want to select a Bluetooth printer, tap **Select Printer**. The Palm handheld searches for Bluetooth devices. When the list of available devices is displayed, proceed to step 9.
   - If you want to cancel printing, tap **Cancel** and exit the printing function.
9. Tap the checkbox next to the printer's Bluetooth device name, then tap **OK**.
10. If you are prompted to enter a PIN code, enter the printer's PIN code, then tap **OK**.

    The default PIN code is 0.

    The Palm handheld connects to the printer, then the file prints.

(optional) choose default printer

You can select a default printer to use for all your printing. To select the hp deskjet 995c Bluetooth printer as the default printer:

1. Tap **BtPrint995c**.
2. Tap **BTDiscover**.

   The Palm handheld searches for Bluetooth-enabled printers within 30 feet.
3. Tap **Find More**.
4. Tap **hp deskjet 995c**.
5. Tap **OK**.

(optional) Documents To Go®

Documents To Go enables you to print MS Word and MS Excel files. It is included on the Palm handheld installation CD in the Bonus Software section.

installing

Install Documents To Go from the CD that originally came with your Palm handheld, or visit the DataViz Website at www.dataviz.com for more information.

printing

1. Tap the **Home** icon until the **All** menu appears.
2. Tap the **BtPrint995c** icon.
3. Tap the **DocToPrint** icon.
   The DocToPrint screen appears.
4. Click the arrow next to Document Type to select the appropriate document type option.
   Four options are listed:
   - All Types
   - DocFile
   - Sheet To Go
   - Word To Go
5. Select the appropriate Document Type.
   The screen for the selected document type appears displaying a list of applications which can be printed.
6. Select a file and tap **Print**.

7. Select one of the following options:
   - If you have selected a default printer, tap **OK**, then proceed to step 9. For more information on selecting a default printer, see (optional) choose default printer on page 7.
   - If you want to select a Bluetooth printer, tap **Select Printer**. The Palm handheld searches for Bluetooth devices. When the list of available devices is displayed, proceed to step 8.
   - If you want to cancel printing, tap **Cancel** and exit the printing function.
8. Tap the printer's Bluetooth device name to select it, then tap **OK**.

   The BtPrint screen appears.
9. Select the appropriate print options, then tap **OK** to print the document.

   The Palm handheld connects to the printer and the file prints.